



Bristol Double Glider
Planeur double Bristol
Planeador doble Bristol


Assembly Instructions
instructions de montage
Instrucciones de montaje

BERLIN
GARDENS

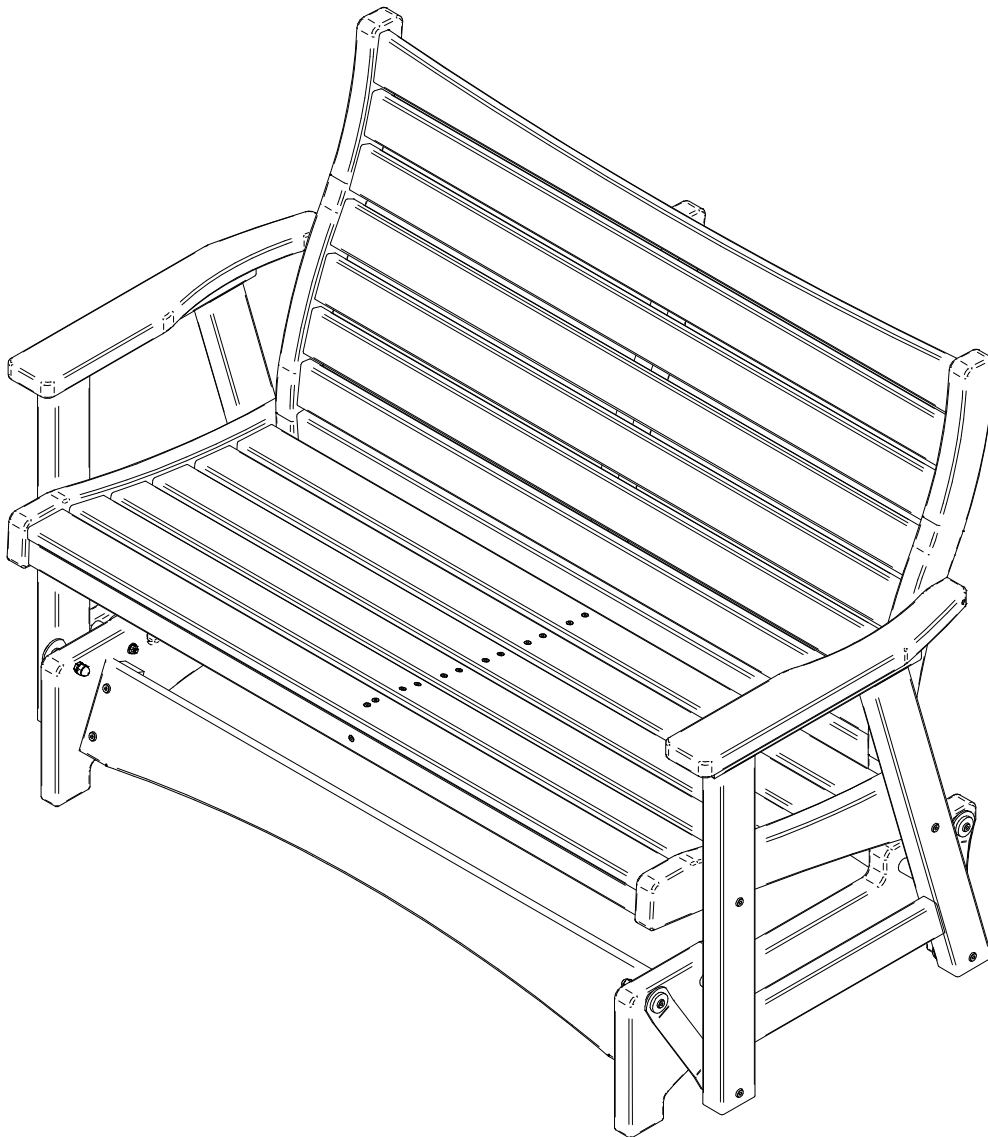


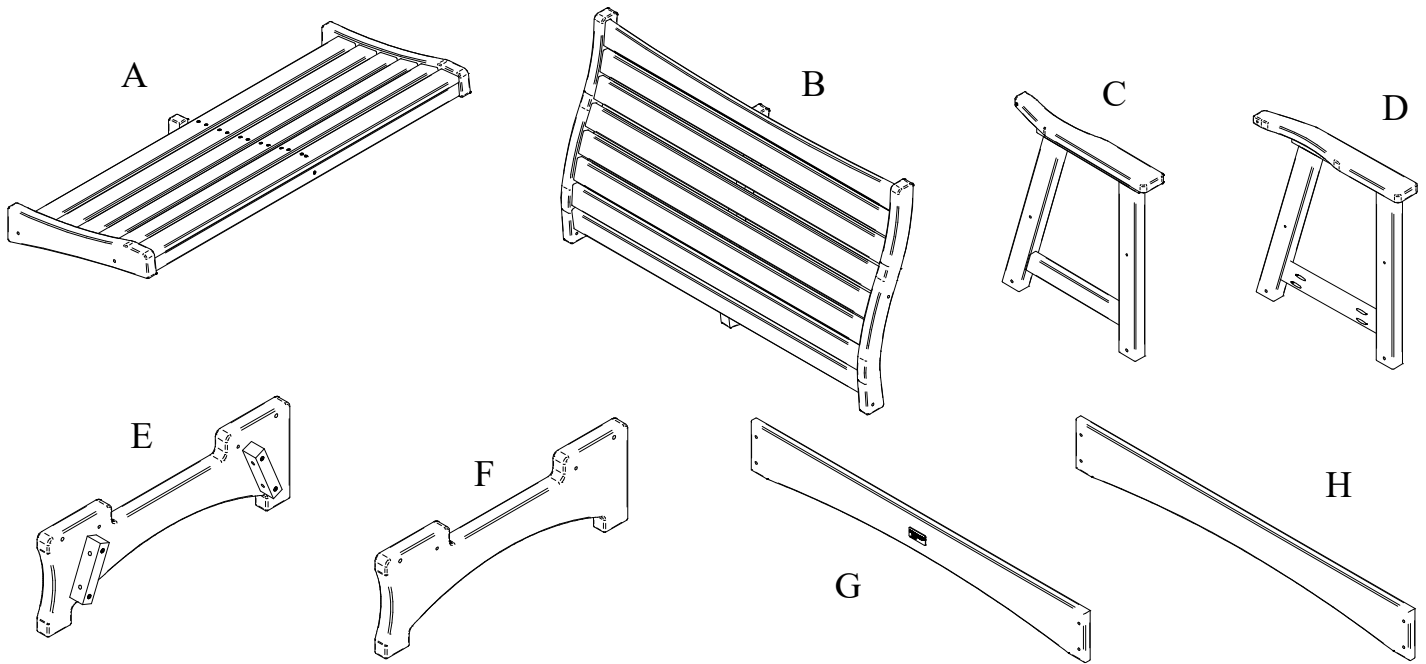

I x4

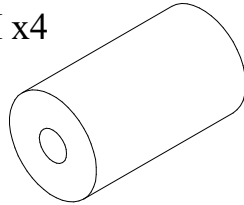


81800 x4

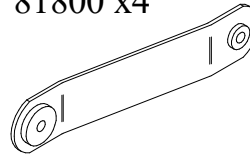


Hardware Included
Matériel inclus
Herrajes incluidos


75516 x4

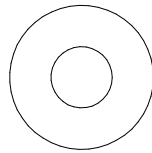


61516 x4

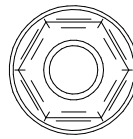


62516 x8

 


63516 x4

 


6114 x19

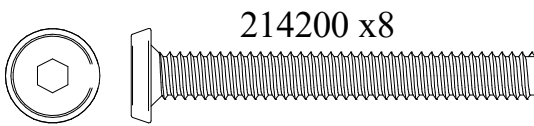


214200 x8

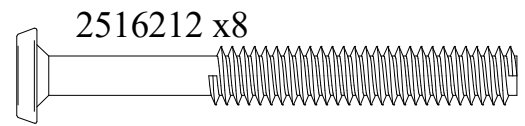


2516212 x8

 


214412 x2

 


214300 x5

 

214314 x2

 


214312 x2


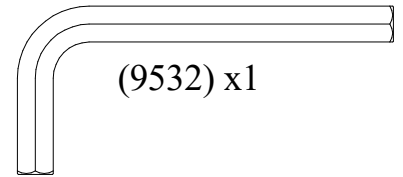





(9532) x1


Items Not Included
Articles non inclus
Artículos no incluidos

  7/16" + 1/2" Wrench
 Clé 7/16" + 1/2"
 Llave de 7/16" + 1/2"



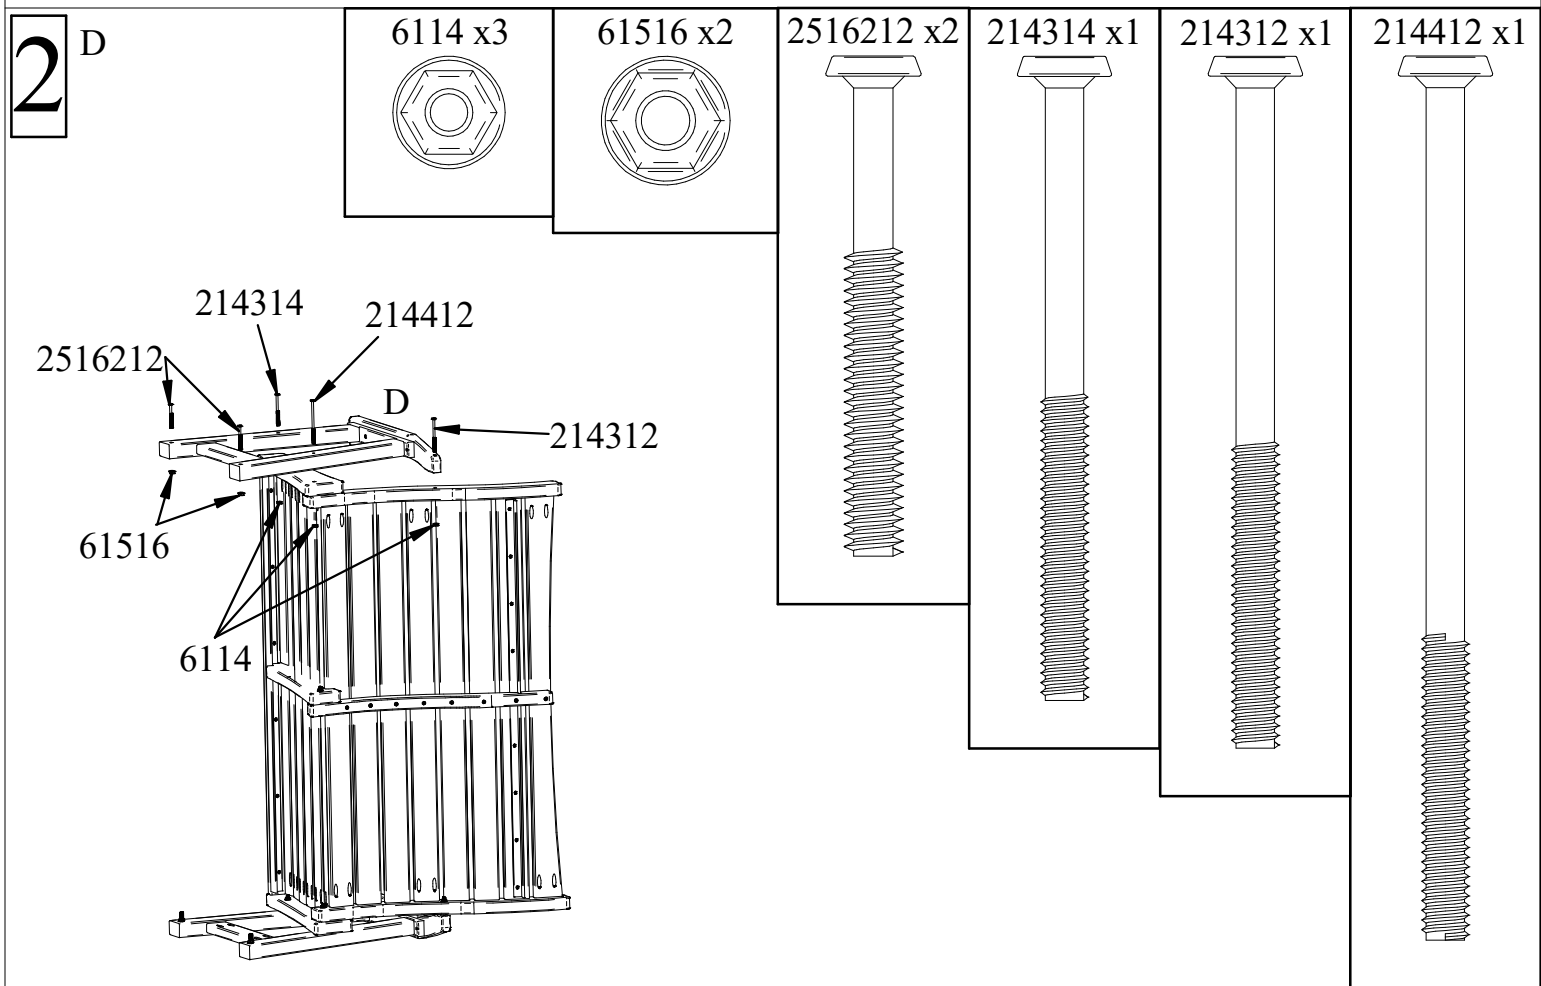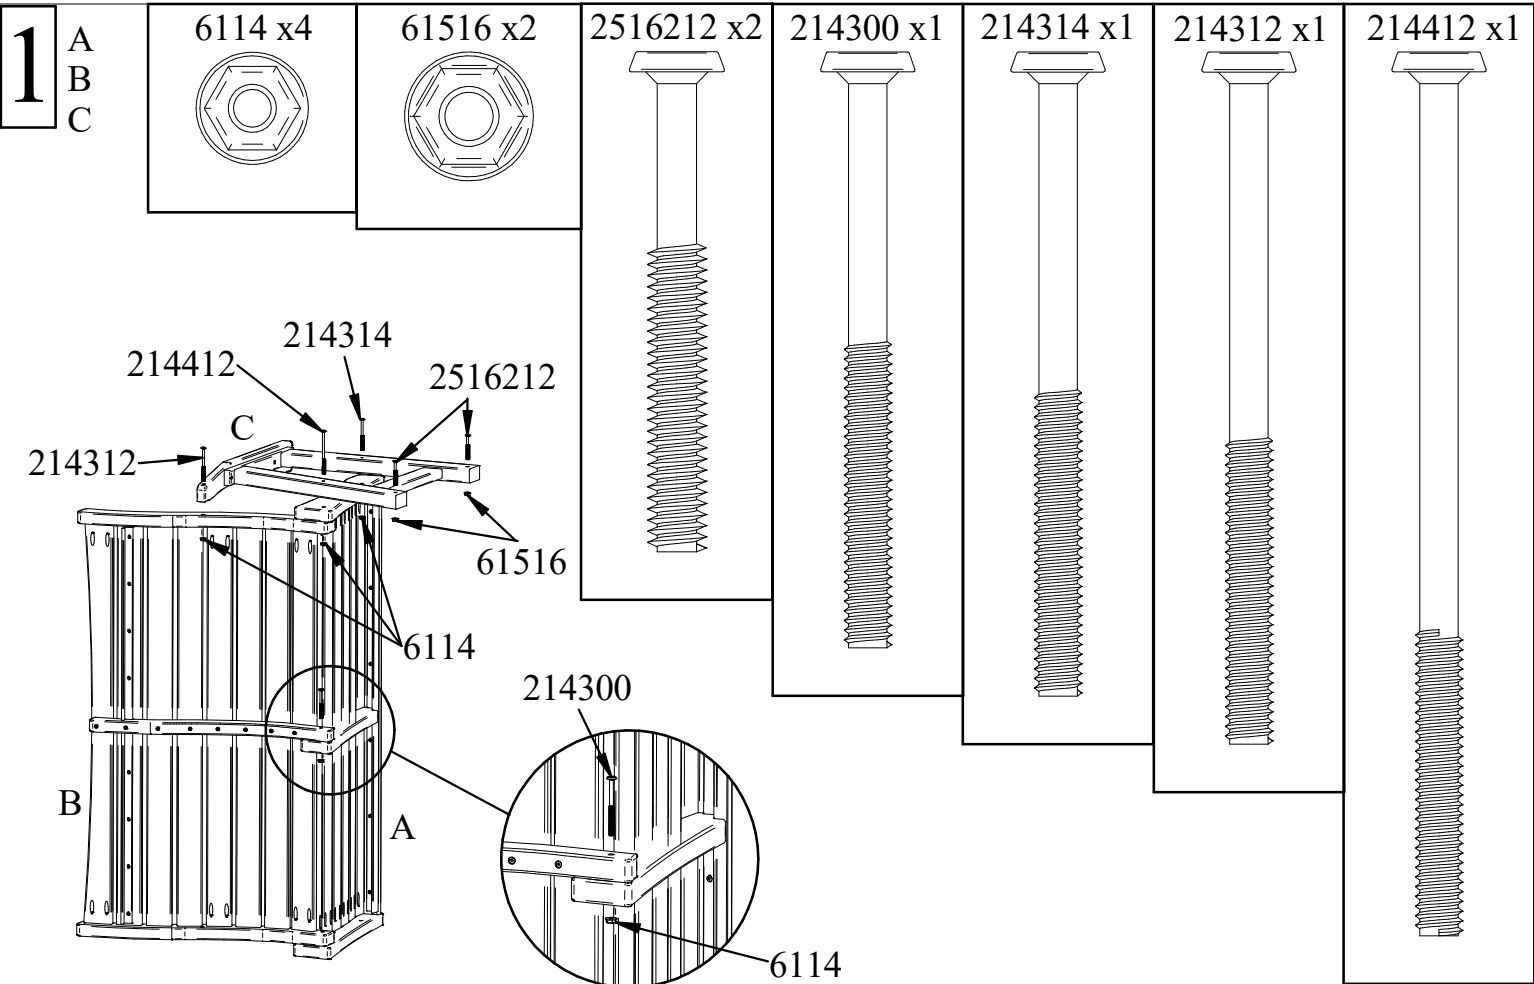

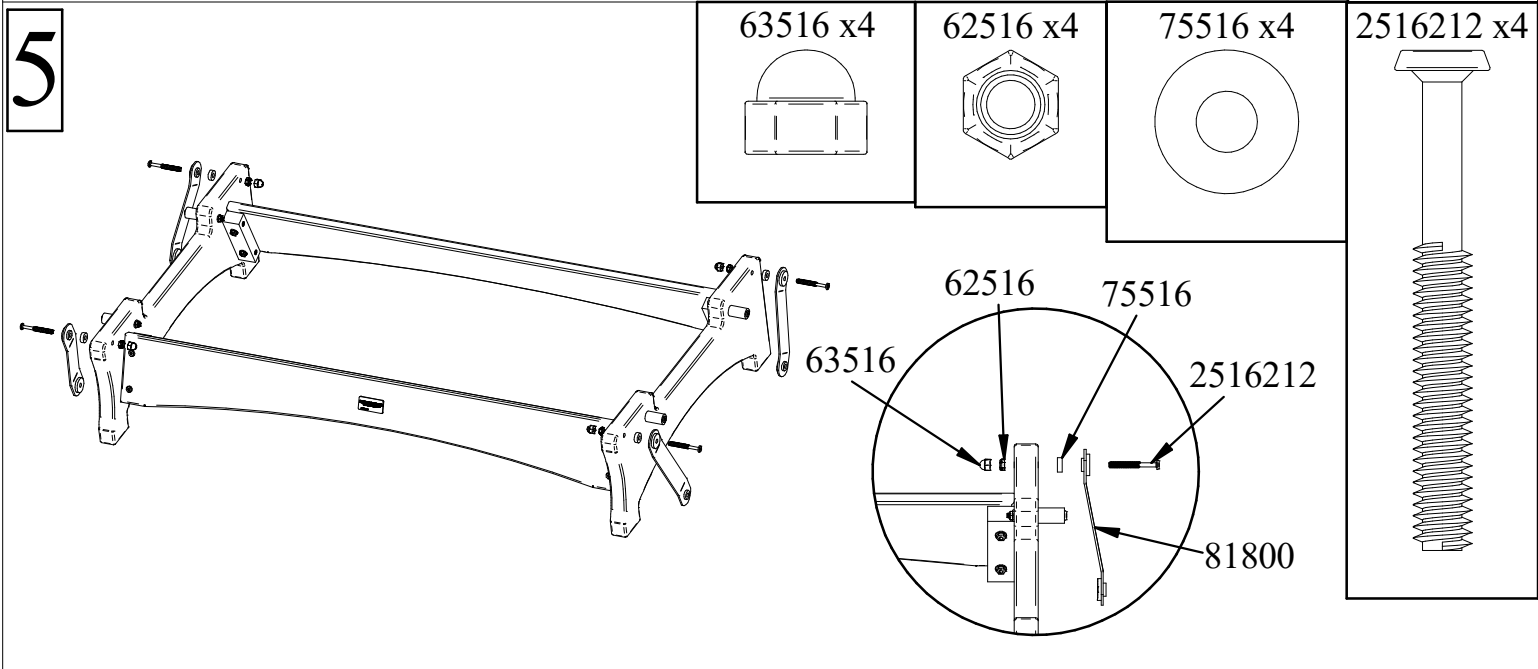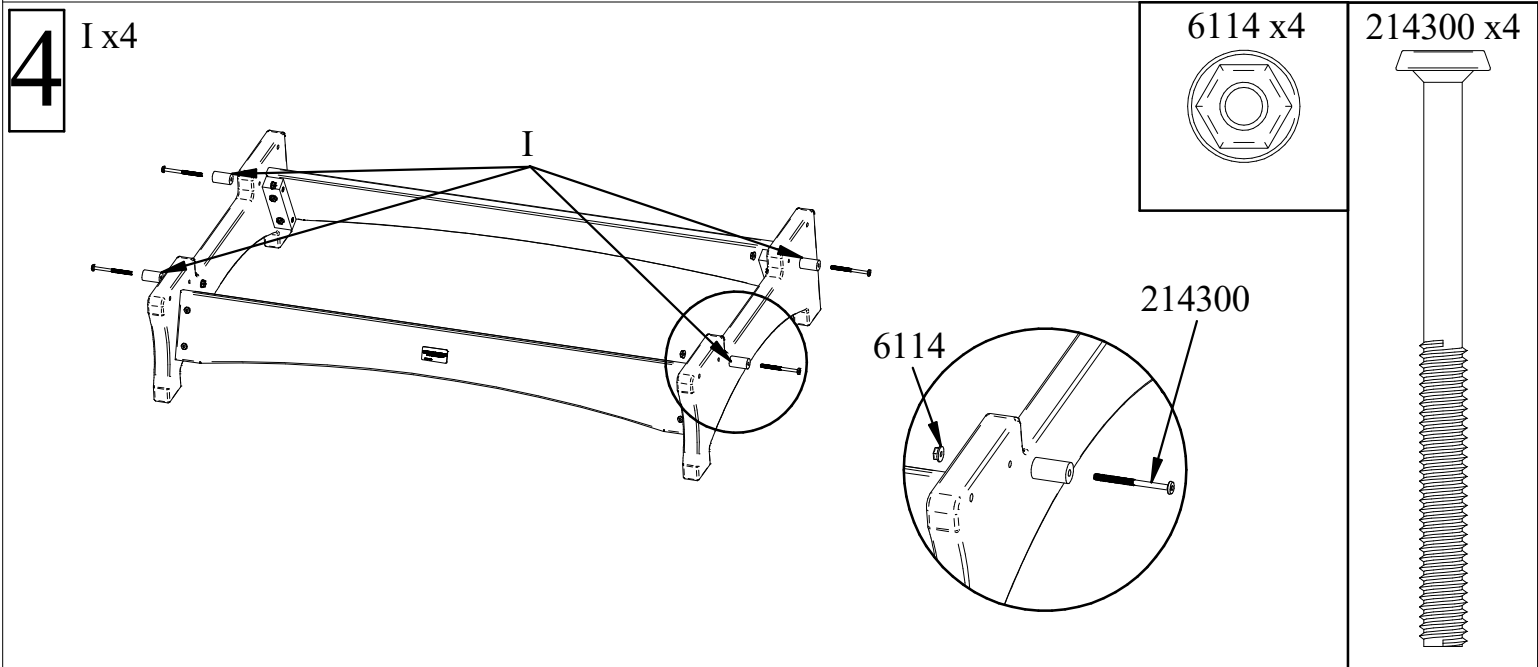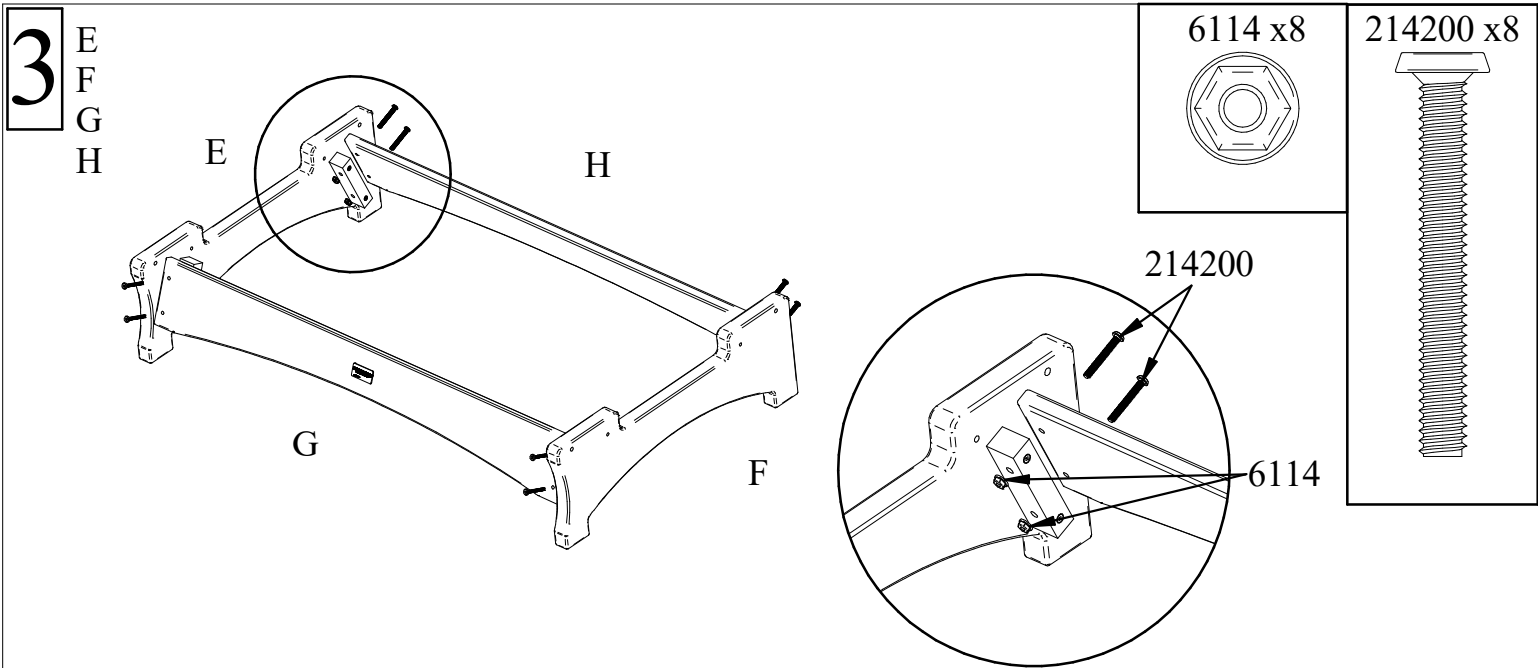



Slide assembled base underneath glider in the position shown and attach to brackets.

Faites glisser la base assemblée sous le planeur dans la position indiquée et fixez-la aux supports.

Deslice la base ensamblada debajo del deslizador en la posición que se muestra y fíjela a los soportes.

