

HDPE Deck Box Small

Coffre de terrasse en PEHD de petite taille


Caja de cubierta pequeña de HDPE








Assembly Instructions

instructions de montage








Instrucciones de montaje

BERLIN
GARDENS

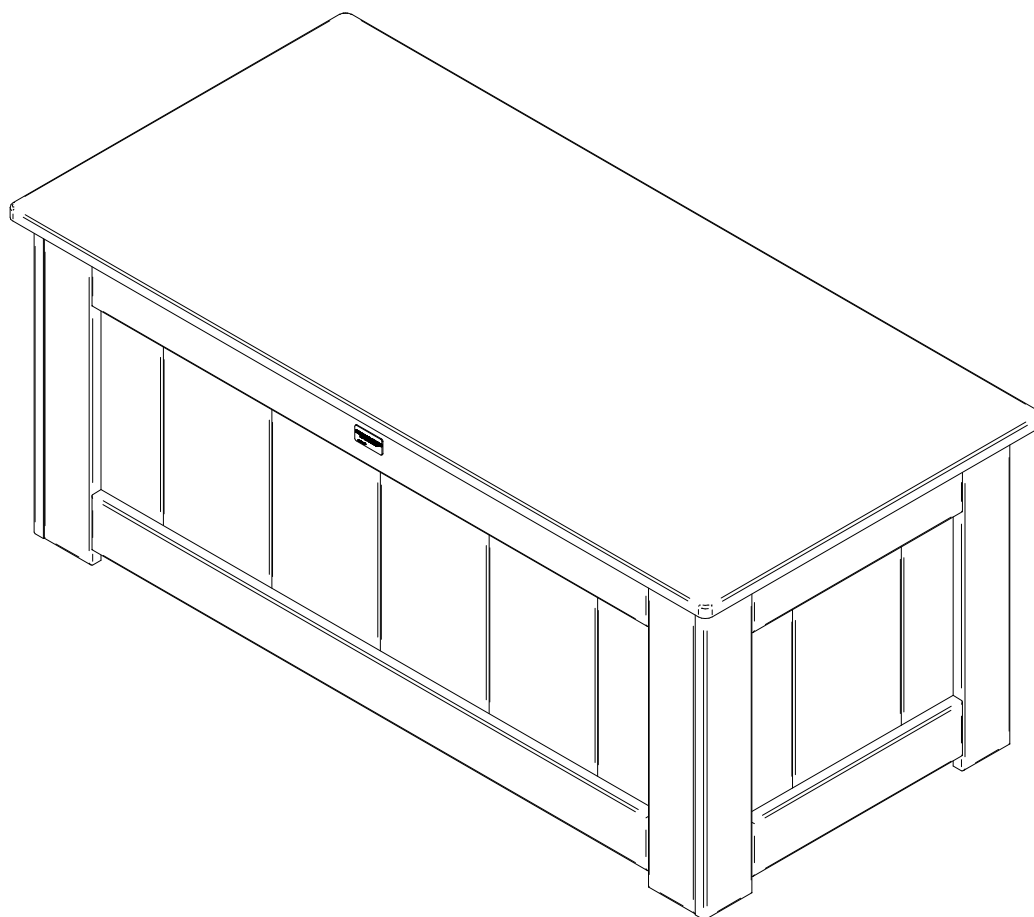


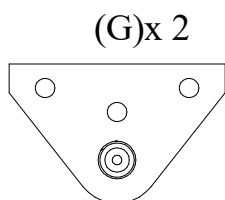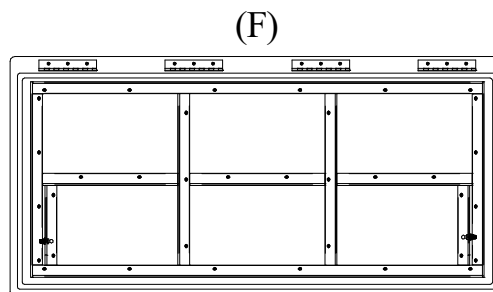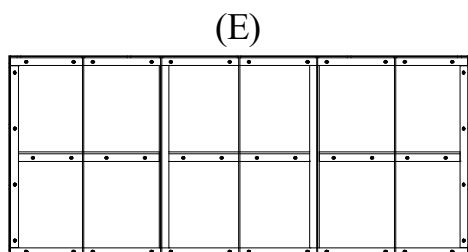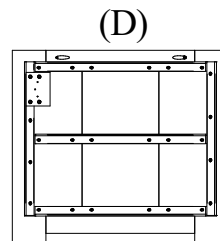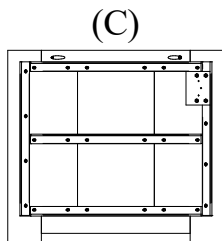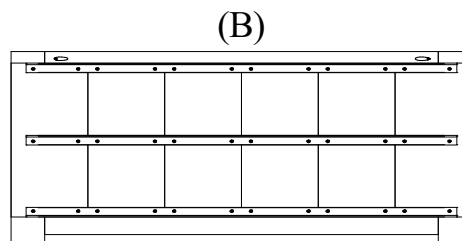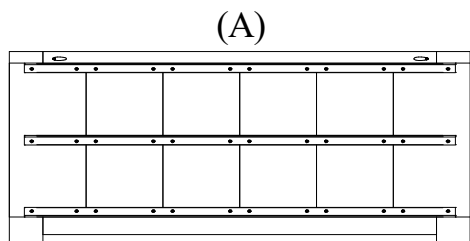



Hardware Included
Matériel inclus
Herrajes incluidos

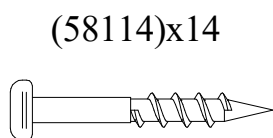


Items Not Included
Articles non inclus
Artículos no incluidos

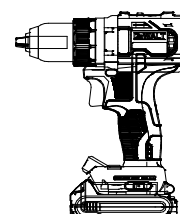



1^A_C

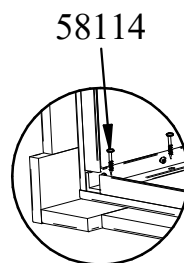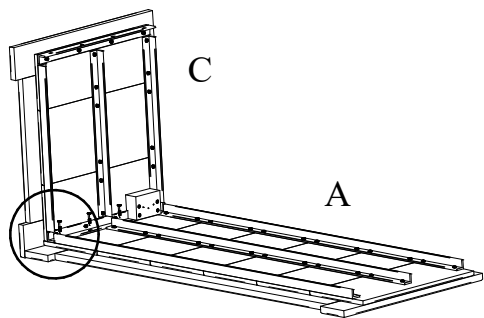


58114x3





2^D

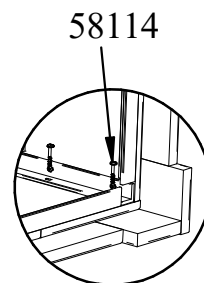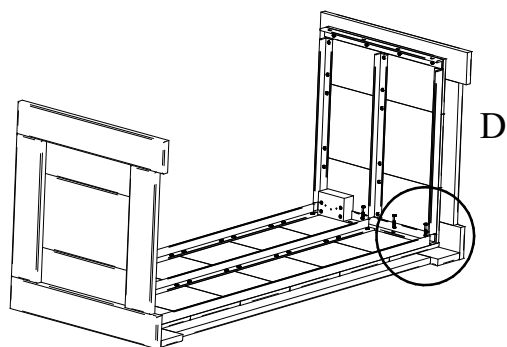


58114x3





3^B

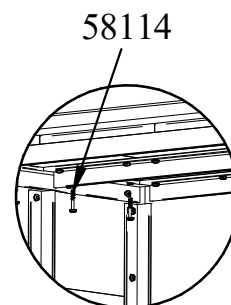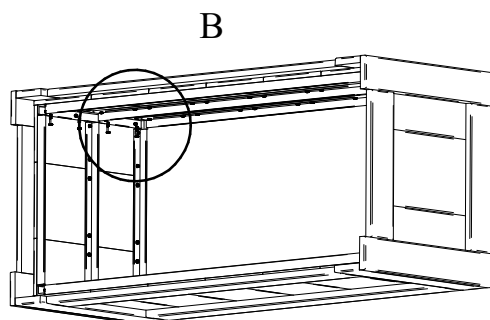


58114x4



4

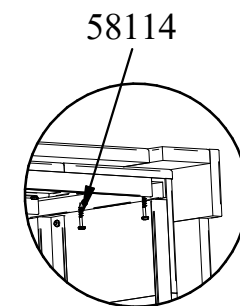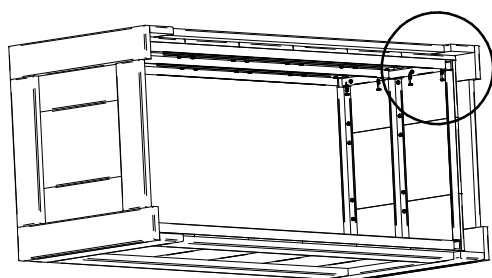

58114x4




5^E

Push bottom panel into frame until against inside frame pieces then fasten using screws shown.

Poussez le panneau inférieur dans le cadre jusqu'à ce qu'il soit contre les pièces intérieures du cadre puis fixez-le à l'aide des vis indiquées.



Empuje el panel inferior dentro del marco hasta que toque las piezas internas del marco y luego fíjelo con los tornillos que se muestran

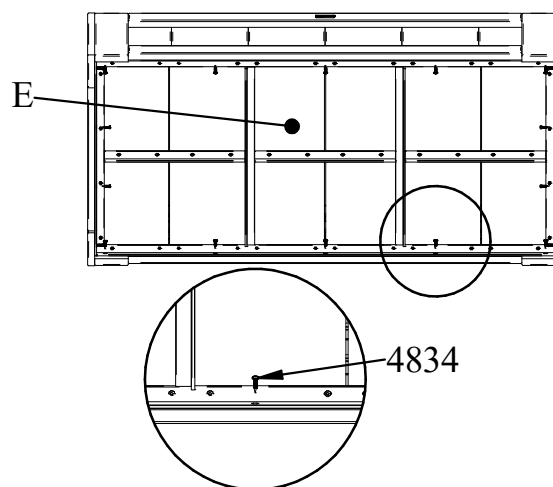


4834x18





6^G

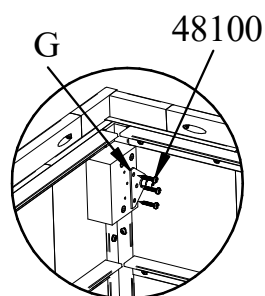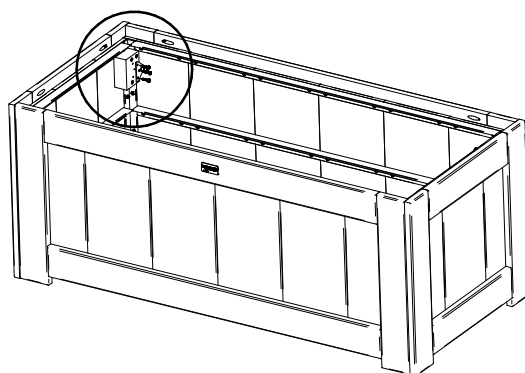


48100x3






7^G

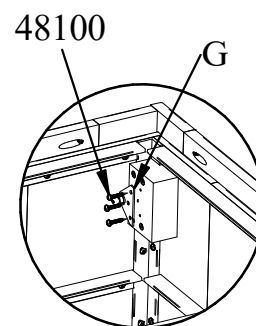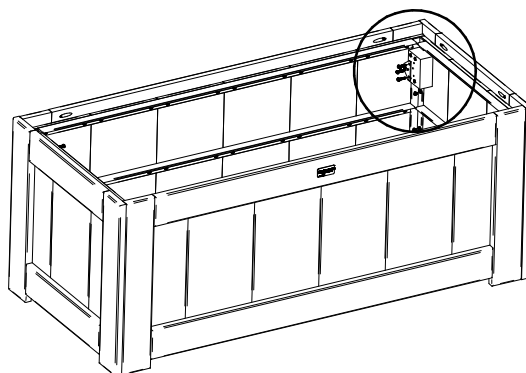


48100x3



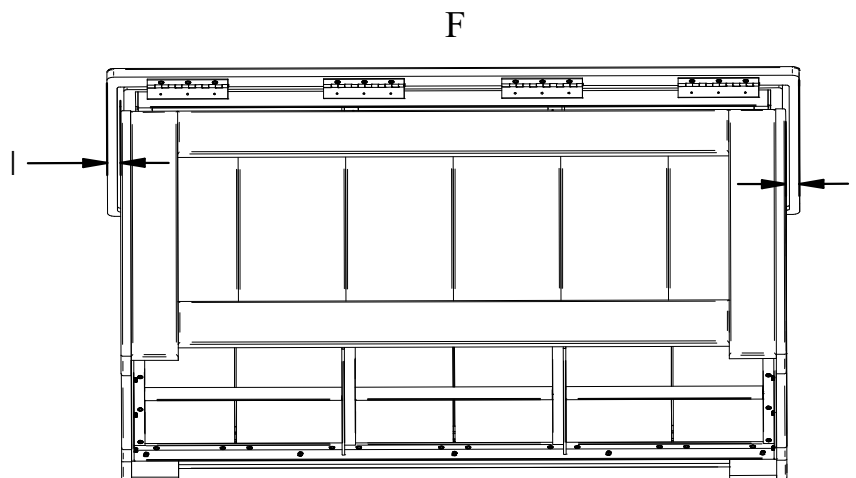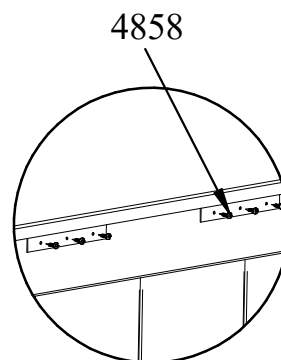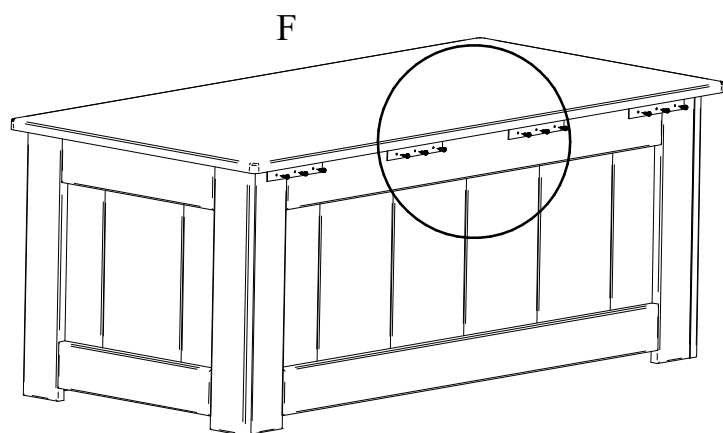8^F9^F

4858x12

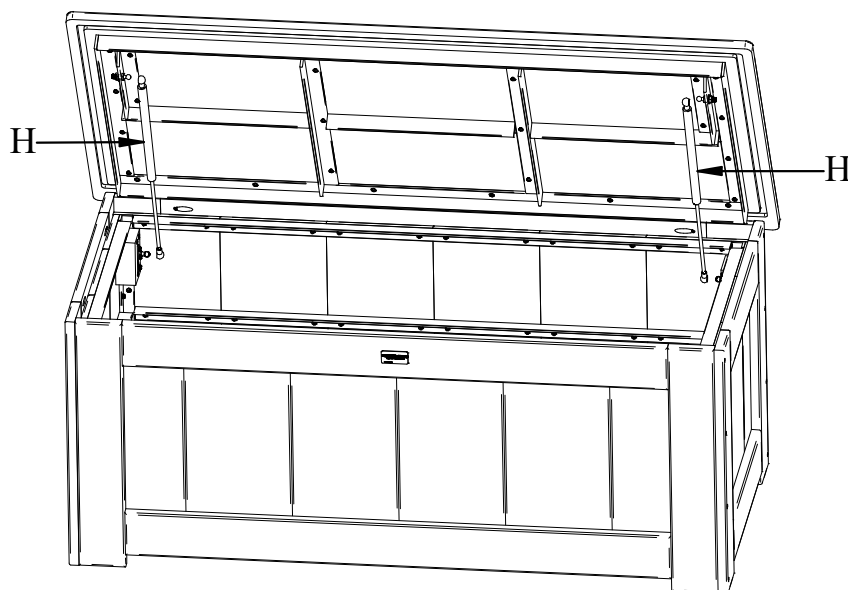10^{H x2}

When attaching gas cylinders be sure to attach larger cylinder part to the top and smaller part to the base.

Lors de la fixation des bouteilles de gaz, veuillez à fixer la plus grande partie de la bouteille en haut et la plus petite partie à la base.

Al colocar los cilindros de gas, asegúrese de colocar la parte más grande del cilindro en la parte superior y la parte más pequeña en la base.